



Targa3-riser

explanation and manual
for the trimmers on
D-riser

top-trimmer/pitch trimmer:
this trimmer shortens the D-riser up to 3cm (the full 3cm should just be shortened on the larger sizes - from ML up). this trimmer effects the pitching of the wing in the way that the glider will move less forward and stays more neutral or even back above head. this trimmer is the best option when you have small/narrow thermals close to the mountain. the glider will turn then on a spot and the glider stays longer in the thermal as will not pitch in front in dynamics. it improves as well the climbing rate. it feels like flying with a basic/intermediate wing when trimmer is closed

bottom trimmer/speed trimmer:
this trimmer is the best option when flying in gaggles. as the basic trimmspeed of the targa3 is pretty high it can happen that you have to overtake other gliders while thermaling. this trimmer reduces the trimm-speed to match the thermaling speed to the other wings around. as well trimmer can be opened and give you some extra speed without pushing the speed bar. the mid position of the trimmer (half closed/half open) is the standard position.

the two different trimmer must not be closed at the same time (speed trimmer in mid position is neutral) to avoid stalling tendencies.